


Looking After your Hardwood Windowboards

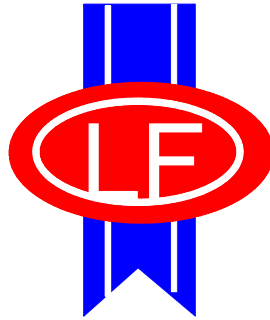

Helpful Hints

Step 1

Lightly Sand Surface of Internal Hardwood Window Boards with a very fine sand paper (400 Grit Paper)

Step 2

After Sanding wipe a white spirit rag over the surface and allow to evaporate

Step 3

With a soft rag rub a colour or clear stain into the wood allowing to dry

Step 4

Repeat this process until the colour you wish to achieve

NOTE

When you are satisfied with the colour repeat step 1 & 2 but use Linseed Oil for Step 3. you will need about 3 Coats of Linseed Oil to put a surface on the wood

Material Required

400 Grit Sandpaper
Colour Wood Stain ~ Dulux or Cuprinol
White Spirit
Towelling Rag or Cotton Rag
Linseed Oil



Natural Teak



Brown Mahogany